

Elfring Fonts, Inc.

PCL Sample MICR Fonts

This evaluation package contains five MICR fonts (*also known as E-13B*), to print magnetic encoding on checks, and six Secure Number fonts, to print check amounts. These fonts come in standard PCL bitmapped soft font format. All fonts come in 600 dpi format, with a file name extension of .L4P. **We do not include 300 dpi .USP font files** because they are not accurate enough to work on modern printers. MICR (*Magnetic Ink Character Recognition*) encoding is used by all banks in North America (*and many other countries*) to automate check processing. Federal banking laws (*Check 21 Act*) and the Canadian law (*CPA 006*) **require** that MICR lines be printed with magnetic ink. Since no magnetic ink exists for inkjet printers, you must use a laser printer with a magnetic toner cartridge to print checks.

These fonts are licensed for use on a **single printer**. To use these fonts on more than one printer, you need to purchase a multiple user/printer license. See the Multiple Printer License file, MultiplePrinters.pdf, for details and pricing.

Note that these sample MICR fonts are protected. They do not contain the numbers 3, 6, and 9. To get the complete MICR font set with all the numbers, you need to buy the retail package from Elfring Fonts.

These fonts are designed to be used on Unix, AS/400, or DOS computers. Windows does **not** support directly PCL bitmapped fonts. Some Windows check writing software does use PCL bitmapped fonts. If you are using Windows software, check with your software supplier to make sure these are the correct format fonts before buying them. (*We do offer MICR in Windows TrueType format.*) Any computer program that uses these fonts must send the font to the printer before selecting it, and must send PCL (Printer Command Language) commands to select and deselect the font.

The MICR font contains 14 separate characters, plus several spacing and alignment characters. MICR includes the numbers 0 - 9, plus four special characters. The four special characters are each available in 2 different positions: the Xerox mapping and the PeopleSoft mapping.

MICR Character	MICR Symbol	Xerox Position	PeopleSoft Position
Zero	0	0	0
One	1	1	1
Two	2	2	2
Three	3	3	3
Four	4	4	4
Five	5	5	5
Six	6	6	6
Seven	7	7	7
Eight	8	8	8
Nine	9	9	9
On-Us Symbol		<	C
Transit Symbol		:	A
Amount Symbol		;	B
Dash Symbol		=	D

On-Us Symbol, < or C

The On-Us symbol tells the check reader that the next series of numbers identifies the account number, and other items. The issuing bank determines the content of the On-Us area, so the branch bank the check is drawn on may also be indicated.

Transit Symbol, : or A

Each MICR line always includes two Transit Symbols. They open and close the transit field. Numbers between these fields tell the check reader the institution which the check is drawn on.

Amount Symbol, ; or B

Two amount symbols tell the check reader that the numbers between them are the amount of the check. This field is usually blank and added later at the bank or under other special circumstances.

Dash Symbol, = or D

The Dash Symbol is sometimes used to separate items in the On-Us field. Its use for this purpose is not recommended. Some check readers have problems detecting it.

How To Use These Fonts

We supply these MICR fonts in binary PCL soft font format. The fonts are simple binary data soft font files that resides on your computer's hard disk. To use a font to print MICR or Secure Numbers, you first send the font to your printer (*this process is called downloading*). When your application needs to print using one of these fonts, it sends a special command to the printer to switch from the normal font to the new font. You then send your data. Finally, you send a special printer command to tell the printer to return back to the normal font.

Printer commands always start with the Escape character (1B in hex, or 27 in decimal). The rest of the printer command is straight ASCII.

To return back to the default font your printer sets when it is turned on use the following PCL command:

<Esc>(3@

To summarize this process:

- 1) Send the font to your printer
- 2) Select the font
- 3) Print your MICR line or check amount
- 4) Return back to the default font

Downloading Fonts to Your Printer

The Windows utility program Downloadwin.exe is a Windows program that will send a font to any Windows printer. See the separate pdf manual for this product.

DOS:

The DOS utility program Download.exe will send a font from the command line or from a batch file to any parallel or serial printer. It will not work with networked printers or printers with USB connections. See the documentation file, download.txt for details on how to use this utility.

Other:

Each of these fonts must be sent to your printer (downloaded) before they can be selected and printed. If you are on a PC, you may be able to use our Download utility (see the documentation file download.txt for more information on this program) to send the fonts to your printer. If you are on a computer other than a PC, how you download a font to your printer depends on the computer you are using. Basically you need to:

- 1) Assign the font an ID number by sending the following PCL command:
<Esc>*c###D where <Esc> stands for the escape character (1B in Hex)
and ### is the font ID number in ASCII, Say 10 for ID 10.
- 2) Copy the font file to the printer
- 3) Repeat step 1 above
- 4) Send the following PCL command to make the font permanent (otherwise it gets erased when you reset the printer.) Note that "permanent" fonts are lost when the power to the printer is truned off.
<Esc>*c5F

To download a font to your printer and assign it ID number 23 send:

```
<Esc>*c23D
copy the font file to the printer
<Esc>*c23D
<Esc>*c5F
```

Note that you can also select a font by the ID umber you assigned when you downloaded the font. To select a font by its ID number use:

```
<Esc>(###X
where <Esc> is the escape character (1B hex) and ### is the ID number you assigned to the font
when it was downloaded.
```

To select the font in the download example above with ID 23 send: <Esc>(23X

Calibration

The MICR encoding on a check must be printed at as close as possible to 8 characters to the inch. In addition, character shapes must exactly match to their predicted size. Unfortunately, differences in paper, laser printing engines, toner cartridges, and settings can produce widely

varying results. This can cause your checks to be rejected by banks. To solve these problems each MICR font from Elfring Fonts Inc has calibration characters built into it. You print sample sheets using three different MICR fonts on your laser printer, using your magnetic toner and paper. The results will determine which of the MICR fonts we supply should be used in your application.

Many MICR printing problems are related to the paper you print on. When paper absorbs moisture from the air it expands. When heated in your laser printer, the paper shrinks. This can change the length of the MICR encoding line on the page. So to start, you need to ensure that your paper is stored in a dry environment. You can preheat some paper to drive the moisture out of it. Before you perform the tests described below, print a blank page, and then use that blank page for the printing tests. This will preshink the paper.

The next thing to do is to ensure you are printing at exactly 8 characters per inch. Download one of the three base MICR fonts to your printer. (MI100a08.L4P, MI100R08.L4P, or MI100c08.L4P) Select this font and then print two lines of text, (*on the preshrunk paper*), as follows to check the horizontal spacing of your system. (The spacing check vertical line is produced using the "I" key.) Repeat this test with each of the three fonts mentioned above.

MI100a08.L4P

0 1 2 3 4 5 6 7 0 1 2 3 4 5 6 7 0 1 2 3 4 5 6 7 0 1 2 3 4 5 6 7 0 1 2 3 4 5 6 7

MI100r08.L4P

0 1 2 3 4 5 6 7 0 1 2 3 4 5 6 7 0 1 2 3 4 5 6 7 0 1 2 3 4 5 6 7 0 1 2 3 4 5 6 7

MI100c08.L4P

0 1 2 3 4 5 6 7 0 1 2 3 4 5 6 7 0 1 2 3 4 5 6 7 0 1 2 3 4 5 6 7 0 1 2 3 4 5 6 7

Wait few minutes after printing the test line before measuring it. Use an accurate ruler and measure the distance between the vertical bars over the entire length of the line. It should measure very close to 6 inches long. (*Plus or minus about 3/64's of an inch.*) Pick the font that generates a line closest to 6 inches in length. This font is the one you will use for all MICR printing. If no line measures 6 inches in length, check to see that your paper contains the proper level of humidity. (Run a page through your laser printer and then run the paper back through the laser to print the sample on it again. If the length of the line changes your paper has shrunk- it contains too much moisture.)

The six MICR fonts in this set are defined as follows:

MI100A08.L4P
MICR Long

MI100R08.L4P
MICR Standard

MI100C08.L4P (600 dpi, LaserJet 4, 5, & 6)
MICR Short

MICR Font Selection Commands

MI100R08.L4P Name:MICR Sample Symbol Set=0U Resolution=600

Font Calling Sequence: <Esc>(0U<Esc>(s1p10.20v0s0b104T

MI100B08.L4P Name:MICR Sample Symbol Set=0U Resolution=600

Font Calling Sequence: <Esc>(0U<Esc>(s1p10.20v0s3b104T

MI100L08.L4P Name:MICR Sample Symbol Set=0U Resolution=600

Font Calling Sequence: <Esc>(0U<Esc>(s1p10.20v0s-3b104T

Secure Number Fonts

This font set includes two different fonts for printing check amounts. These Secure Number fonts are designed to be difficult to alter or forge.



Each Secure number font includes the following characters:

\$ ' () * , - . / > + [] 0 1 2 3 4 5 6 7 8 9

Secure Number Font Selection Commands

REV26SEC.L4P Name:Secure Sample Symbol Set=0U Resolution=600

Font Calling Sequence: <Esc>(0U<Esc>(s1p26.19v0s0b181T

REV26SE2.L4P Name:Secure Sample 2 Symbol Set=0U Resolution=600

Font Calling Sequence: <Esc>(0U<Esc>(s1p26.19v0s0b182T

REV20SEC.L4P Name:Secure Sample Symbol Set=0U Resolution=600

Font Calling Sequence: <Esc>(0U<Esc>(s1p20.19v0s0b181T

REV20SE2.L4P Name:Secure Sample 2 Symbol Set=0U Resolution=600

Font Calling Sequence: <Esc>(0U<Esc>(s1p20.19v0s0b182T

REV13SEC.L4P Name:Secure Sample Symbol Set=0U Resolution=600

Font Calling Sequence: <Esc>(0U<Esc>(s1p13.11v0s0b181T


REV13SE2.L4P Name:Secure Sample 2 Symbol Set=0U Resolution=600

Font Calling Sequence: <Esc>(0U<Esc>(s1p13.11v0s0b182T

MICR GAUGE INSTRUCTIONS

A MICR gauge lets you quickly and easily verify that all the data on your check is accurately printed in the proper positions. A MICR gauge is a clear plastic template that you position over your check. It will indicate whether or not your MICR encoding line follows the correct spacing, is not skewed, and has the right number of characters. The MICR gauge also shows you the magnetic clear zone, maximum and minimum check heights and widths, and much more.

Note that all U.S. specifications are measured in inches ("). All Canadian specifications are measured in centimeters (cm). MICR printing is **right** justified. Most MICR measurements are specified from the bottom right corner of your check.

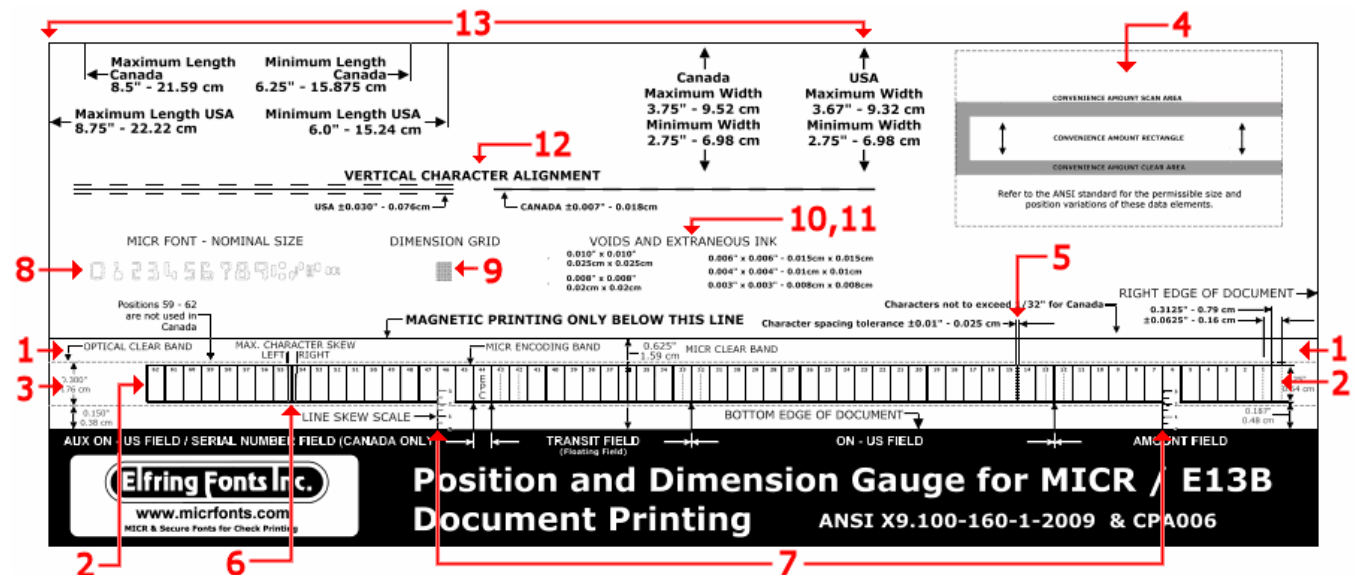

Measurements for items 1 - 6 are made by positioning the gauge over the check so that the check's bottom and right edges align with the black bottom area and right edge of the MICR gauge.

1. MICR CLEAR BAND:

This area, extending the length of the check and 0.625" (1.59 cm) up from the bottom edge of the check must be free of **all magnetic ink** other than the MICR / E13-B encoding information. Your gauge shows the complete extent of this area.

2. MICR ENCODING BAND:

All MICR characters must be printed inside the encoding band located centrally within the clear band¹. There are 62 character positions broken up into 4 fields: Aux ON-US / Serial Number,

Transit, ON-US, and Amount. The **Amount Field** occupies positions 12 - 1, and the **Transit Field** must occupy positions #43 and stop at position #33 unless a floating field is required, $\pm 0.0625''$ (0.16cm). Both the **ON-US Field** and **Auxiliary ON-US Field** are floating fields and may begin and end anywhere within their respective boundaries. The **External Processing Code Field** (EPC), is located between the transit field and the auxiliary on us field. The field location and content are supplied by your financial institution must be followed exactly.

Canada only: CPA 006 update June 30, 2006: The allowance for the maximum number of characters in the serial number field is twelve (12) digits and two (2) On-Us symbols. This field must end in position 58. **Canadian Note:** positions 63, 64, & 65 are not to be occupied. They are only used in the U.S.

3. OPTICAL CLEAR BAND:

This area, surrounding the MICR encoding band and extending the length of the check, must be free of all background printing exceeding the optical specification of 0.30 Print Contrast Signal (PCS). Refer to the specifications for related border allowances and see the MICR Gauge for details

4. CONVENIENCE AMOUNT SCAN AREA (CASA):

This rectangle contains the convenience amount clear area (CACA) and the convenience amount rectangle (CAR). Refer to the ANSI specifications for related position and size variations. Located in the upper right hand side of the gauge.

5. HORIZONTAL CHARACTER TO CHARACTER SPACING:

Within individual fields all characters must have their right edges touching the right edges of the rectangular boxes they are located in, $0.125''$ (0.317 cm) $\pm 0.010''$ (0.025 cm), right edge to right edge. The check may be shifted horizontally to positions 14 and 15 where possible spacing errors can be checked.

6. CHARACTER SKEW:

Position the check horizontally on the gauge so that the suspect character is in position 54 or 55. If the character is tilted so that it falls outside of either slanted line the vertical character skew specification of 1.5 degrees has been exceeded.

The following measurements require moving the gauge around on the check.

7. LINE SKEW:

Position the check so that the top edges of the MICR characters, excluding the Dash and On-Us symbols, touch the solid horizontal line marking the top of the clear band. The bottom edge of the check will then bisect the vertical scales, marked in 0.5 degree increments, located at positions 6 and 46. The difference in readings between the two scales is the degree of line skew, the maximum line skew is 1.5 degrees.

8. MICR FONT - NOMINAL SIZE:

Position the character under the matching character on the MICR gauge. If the character fits between the inner and outer dashed outlines its size is acceptable.

9. DIMENSION GRID:

This grid is composed of 0.010"; x 0.010" (0.025 x 0.025 cm) squares with adjacent channels measuring 0.003"; (0.007 cm). MICR characters are composed of 0.013" (0.033 cm) horizontal and vertical zones; to measure the stroke width of the character "0" align it under the grid. If a stroke covers a row of squares and its edges bisect both adjacent channels the width of that stroke is 0.010"; + 2 x 0.0015"; = 0.013"; (0.025 cm + 2 x 0.004 cm = 0.033 cm). If the edges just fill the squares the stroke is at the minimum permissible width, if the edges fill adjacent channels the stroke is at the maximum permissible width. To measure the overall dimension of any character and again using the "0" as an example, note it is 7 zones wide and 9 zones high, meeting the specifications for the width and height of a "0".

10. VOIDS:

Position the gauge on the check so that the void is contained within one of the voids / extraneous ink squares. Refer to the specifications for related size variations.

11. EXTRANEOUS INK:

Position the gauge over the check so the spot is contained within one of the voids / extraneous ink squares. Refer to the specifications for related size variations.

12. VERTICAL CHARACTER TO CHARACTER ALIGNMENT:

Position the gauge on the check so the field to be measured is located over the correct country area (U.S. or Canada). The bottom edges of the characters must be contained within the dashed boundary lines above and below the solid base line.

13. DOCUMENT DIMENSIONS:

The maximum and minimum length and width of a check are listed along the top edge of the gauge showing the differences between the U.S. and Canada. The tolerance is ± 0.062 " (0.157 cm) except for the trailing edge where dimensions are required minimums.

MICR Line Requirements

ANSI standards require all checks to have a clear band at their bottom. The only thing allowed in this clear band is a single line of MICR encoding. This clear band has a minimum height of 5/8 of an inch, although 3/4 of an inch is recommended. This clear band must be totally free of any magnetic material, except for the MICR line.

All MICR characters fit on a single line in the clear band. This MICR line has 65 positions, numbered from right to left. (Everything in MICR works backwards {right to left} to what you would expect.) The MICR line must be positioned 3/16 + 1/16 of an inch from the bottom of the check. The MICR line must start 5/16 + 1/16 of an inch from the right side of the check. It can come no closer than 1/4 inch to the left side of the check.

Each MICR line of 65 possible positions is broken up into four fields: Amount, On-Us, Transit, and Auxiliary On-Us. A check must have at least three of these fields: Amount, On-Us, and

Transit. (Note you normally don't print anything in the amount field.) Commercial checks may have an additional field on the left side, called the auxiliary On-Us field. Some checks may also have an external processing code digit positioned between the Transit and auxiliary On-Us fields.

Field	Position	Description
Amount	1	Amount Symbol
	2 through 3	Cents
	4 through 11	Dollars (zero fill to left)
	12	Amount Symbol
Blank	13	
On-Us	14 through 31	Determined by bank, generally contains the account number, serial number, or transaction Code
	32	May optionally expand to position 32
Transit	33	Transit Symbol
	34	Check digit
	35 through 38	Institutional identifier
	39 through 42	Check routing symbol
	43	Transit Symbol
External Processing	44 or 45	Optional External Processing Code
Auxiliary On-Us	45/46 through 65	Determined by bank, generally contains numbering, transaction codes, and internal controls. Checks with this field must be longer than 6 inches.

Copyright 1992-2015 by Elfring Fonts, Inc.

Elfring Fonts, Inc.
2020 Dean St, Unit N
St Charles, IL 60174
Phone: 1-630-377-3520

www.micrfonts.com

MICR Font Set Order Form

To order the complete MICR font set, just fill out this form and fax, email, mail, or phone it to us. We can physically ship the product to you on CD, or deliver it over the internet. To order the product and download it *immediately*, visit our web site. We offer *secure* online ordering.

- ☐ \$129.50 MICR Font Set, LaserJet PCL fonts (DOS/Unix/AS400)
- ☐ \$99.50 PCL soft font downloader (Win 10/8/7/XP/2012/2008)
- ☐ \$139.50 MICR Font Set, TrueType (Win 10/8/7/XP/2012/2008)
- ☐ 7.0% Sales tax **only if** shipped to Illinois

Select Shipping (may combine internet and one other):

- ☐ Internet \$0, ☐ US \$7.5, ☐ Canada \$13, ☐ International \$13

_____ Total enclosed V8.0



Elfring Fonts Inc.
2020 Dean St, Unit N
St Charles, IL 60174

Phone: 1-630-377-3520

Payment: ☐ VISA, ☐ MC, ☐ AmEx, ☐ Check (*US funds/US bank*), ☐ Cash

Card Number: _____ Expiration: _____

Security Code _____ Signature: _____

Day Phone: _____

Email: _____

Name: _____

Company: _____

Address: _____

City, State, Zip: _____

Country: _____

Make checks payable to: Elfring Fonts Inc. If you are paying by check, the check must be in US dollars and drawn on a US bank. We also accept Visa, Master Card, American Express, or cash.

Copyright 1992-2015 by Elfring Fonts Inc.

Elfring Fonts, Inc.
2020 Dean St, Unit N
St Charles, IL 60174
Phone: 1-630-377-3520
micrfonts.com